


# Chapter 5 Installation and wiring


## 5-1 Installation


### [1] Installation of ZM-70D/70T

- ① Make a hole (size :  $230^{+0.5} \times 318^{+0.5}$  mm) on the installation section (thickness : 6 mm at maximum) and install the control terminal.

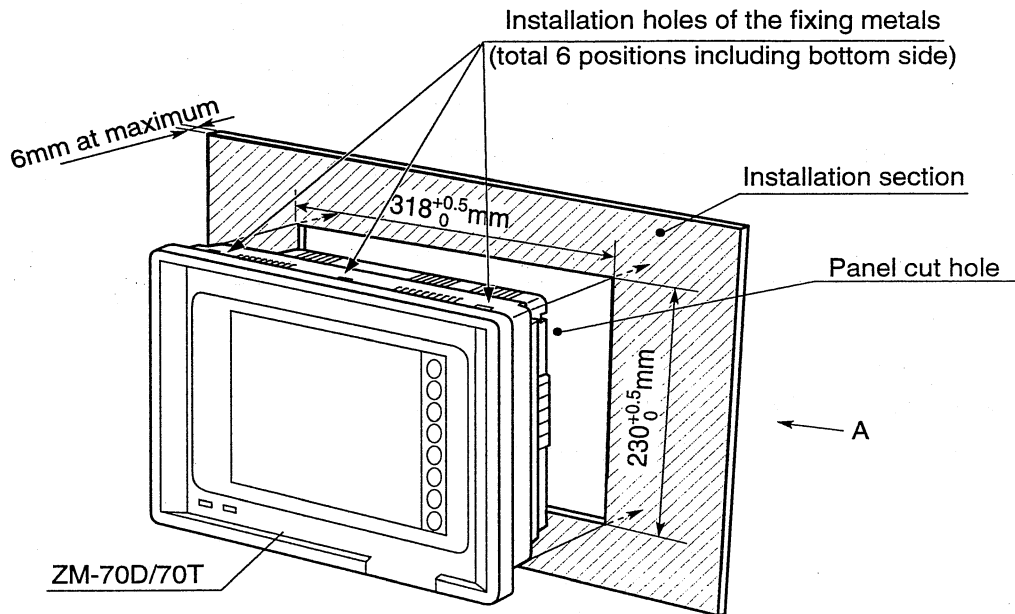


- ② Insert the fixing metals (6 pieces) supplied with the control terminal into installation holes (6 positions) of the body. Tighten the retention screws of the fixing metal to fix the control terminal on an installation section of the panel.

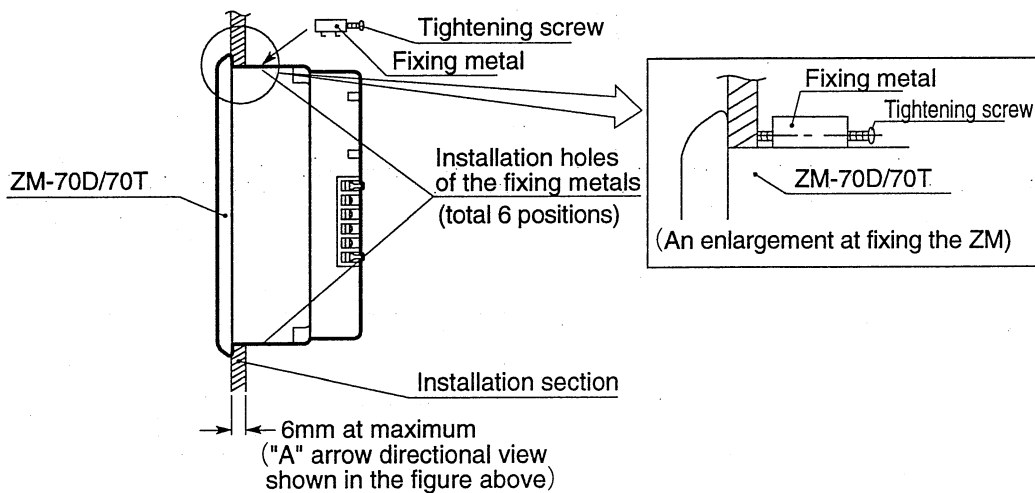

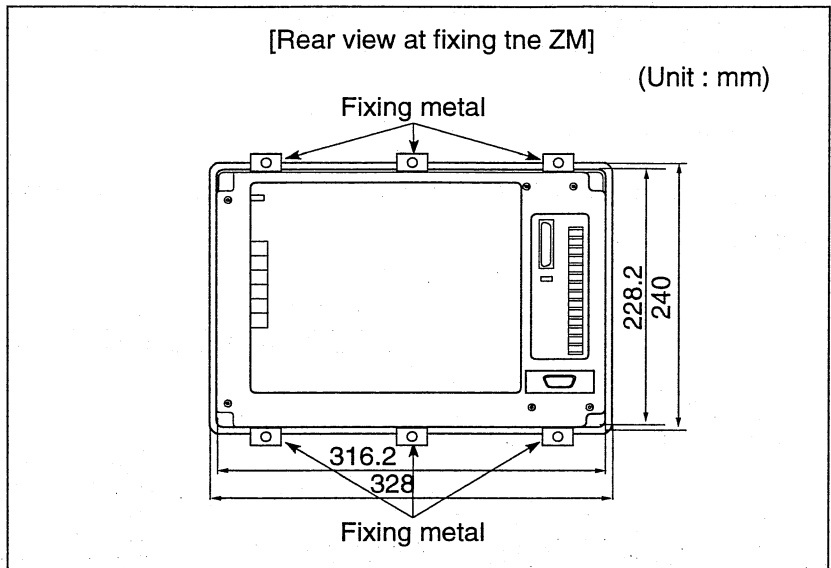

[Installation direction]

Install the control terminal within 90° angle as shown below.  
 Installation in other direction may cause malfunction.

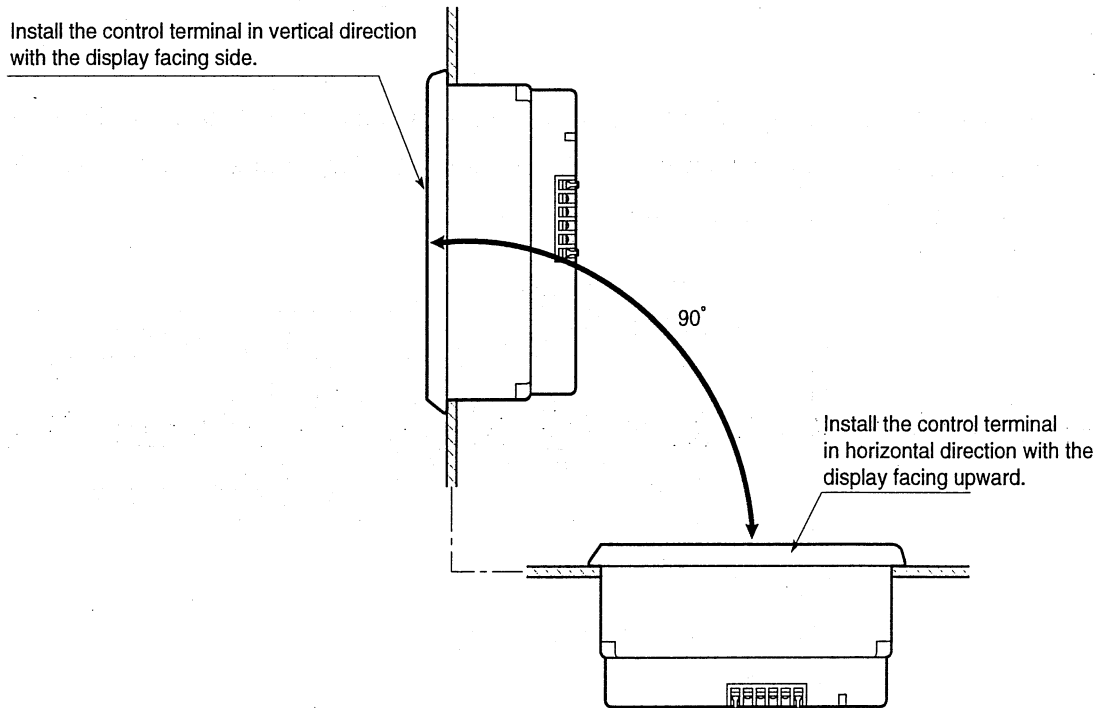


## 6-3 Outside dimensional drawings


(1) ZM-70D/70T

(Unit : mm)

• Front view

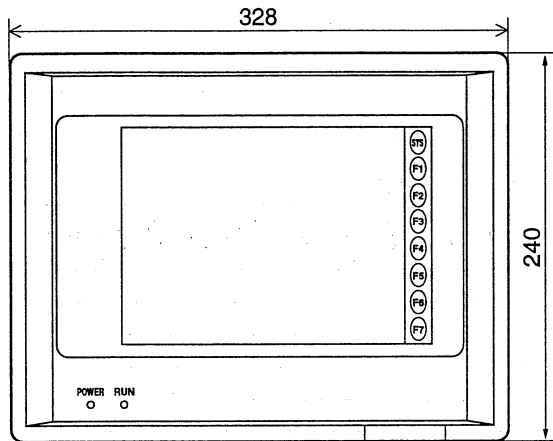


• Right side view

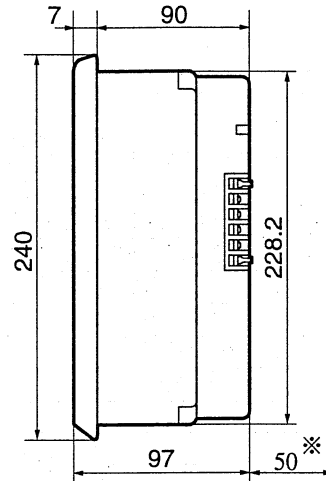

※Leave a minimum of 50mm for wiring the link connection cable and printer connection cable. (on the back of the main housing)

• Bottom view

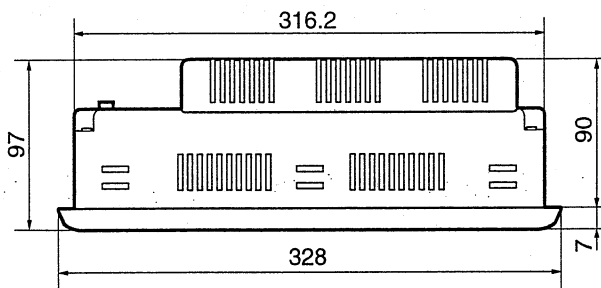

• Rear view

